


GEN I 414CC MANUAL START
 SUMMER POWERHORSE ENGINE
 SERVICE PARTS FOR MODEL NUMBER
 PLMHK2911501E1F1GPBHPSTE2M
 PLMHK2911501E1F1GPBHPSTUVE2S

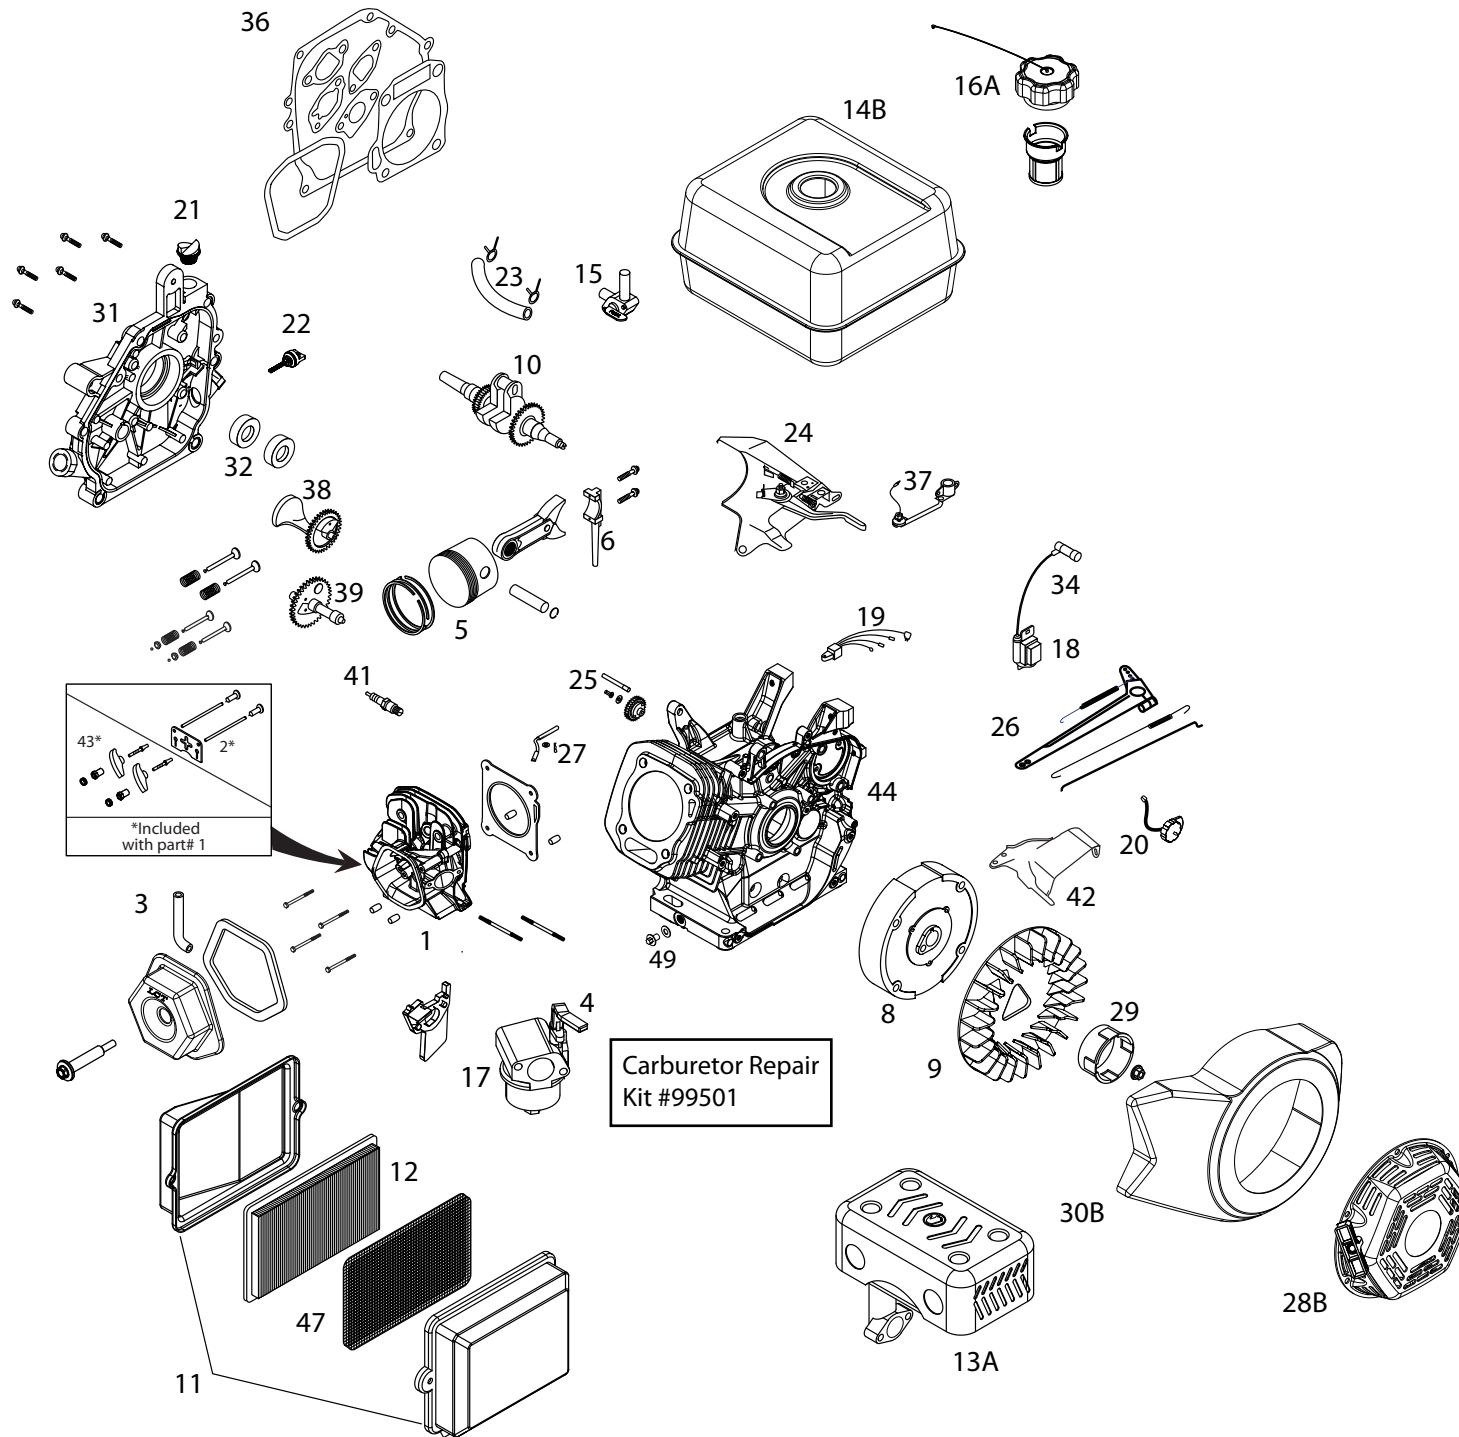

CPC
 Part No. Ref No.

		CPC Part No.	LCT Ref No.
1	Cylinder Head Assembly	41410501	SK4141050.1
2	Push Rod Tappet Kit	41410011	SK4141001.1
3	Valve Cover Assembly	41445001	SK4144500.1
4	Choke Lever, Carburetor	41421201	SK4142120.1
5	Piston Assembly	41414001	SK4141400.1
6	Connecting Rod Assembly	41415001	SK4141500.1
8	Flywheel Assembly, Manual Start	41417001	SK4141700.1
9	Flywheel Fan	41440001	SK4144000.1
10	Crankshaft	41418001	SK4141800.1
11	Air Filter Assembly of Paper	41420021	SK4142002.1
12	Filter Element, Panel Paper	41420121	SK4142012.1
13A	Muffler Assembly	41421101	SK4142110.1
14B	Fuel Tank Assembly	41470021	SK4147002.1
15	Fuel Petcock	41422201	SK4142220.1
16A	Plastic Fuel Cap (Click Style)	41483001	SK4148300.1
17	Carburetor Assembly	41424001	SK4142400.1
18	Ignition Coil Assembly	41425001	SK4142500.1
19	CDI Cox Assembly	41427501	SK4142750.1
20	On/Off Switch	20826001	SK2082600.1
21	Non-Removable Oil Plug	41437151	SK4143715.1
22	Black Oil Dipstick	41437111	SK4143711.1
23	Fuel Hose Kit	41460001	SK4146000.1
24	Throttle Control Assembly	41428001	SK4142800.1
25	Governor Gear Assembly	41429001	SK4142900.1
26	Governor Link Assembly	41430001	SK4143000.1
27	Governor Arm Shaft Assembly	41431001	SK4143100.1
28B	Recoil Starter Assembly	41470011	SK4147001.1
29	Starter Cup	41433001	SK4143300.1
30B	Blower Housing Assembly	41470031	SK4147003.1
31	Crankcase Cover Assembly	41436001	SK4143600.1
32	Seal Kit	41439051	SK4143905.1
34	Spark Plug Boot	41438001	SK4143800.1
36	Engine Gasket Kit	41443001	SK4144300.1
37	Low Oil Sensor	41427001	SK4142700.1
38	Counter Weight Kit	41416501	SK4141650.1
39	Camshaft	41416001	SK4141600.1
41	Spark Plug	29115501	SK2911550.1
42	Top Shield	41410201	SK4141020.1
43	Rocker Arm Kit	41411001	SK4141100.1
44	Cylinder Assembly	41413001	SK4141300.1
47	Foam Pre-Filter	41490011	SK4149001.1
49	Oil Drain Plug Assy	41499111	SK4149911.1